TIGER ELECTRONICS, LTD.
MODEL: 65-152
For ages 7 & Up

MILLENNIUM 2000™

INSTRUCTIONS

THE COUNTDOWN....AND BEYOND!

The event of the century, the Millennium, is just around the corner! What will the world be like? The only way to know for sure is to know what the people of the world are doing – and how often they're doing it! Thus the birth of the Millennium Bug! As the Millennium approaches, you can check fascinating trivia EVERY DAY! EVERY DAY provides different answers to the questions of how often people will be performing various activities. Then after the Millennium, your Millennium Bug stays busy – because you can track how many times people will be doing various activities SINCE the Millennium for months after the Millennium!
It's easy to play!

STARTING YOUR JOURNEY TOWARD THE MILLENNIUM

To start your game and journey toward the Millennium, pull the plastic tab from the back of the unit. The plastic tab is not part of the toy and should be thrown away. Once you turn on your Millennium Bug, it should stay on. You never need to turn it off – it should stay active from now until the Millennium and beyond!

INPUT THE YEAR

Once the game is activated, it is time to input the current year.

Use the LEFT and RIGHT buttons to input the current year.

Press ENTER to confirm the entered year.

INPUT THE MONTH AND DATE

Now input today's date!

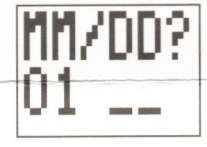

Use the LEFT and RIGHT button to input the month.

Press ENTER to confirm.

Use LEFT and RIGHT to input today's date.

INPUT THE TIME AND YOUR NAME

Enter the correct time and your name!

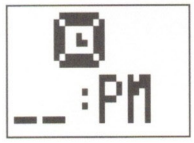

Use the LEFT and RIGHT buttons to enter the correct time.

Press ENTER to confirm.

Set the LEFT and RIGHT buttons to enter your name.

Press ENTER to confirm each letter of your name.

MEET THE MILLENNIUM BUG

After entering the year, month, date, time, and your name, press ENTER twice, and your very own Millennium Bug will appear on screen to entertain you. When you are not using the "countdown trivia", you will see your Millennium Bug having fun performing various tricks on screen automatically!

As you can see, your Millennium Bug is almost alive!

COUNTING DOWN – IN TIME!

Press the TIME key and you can see how much time is left before the Millennium!

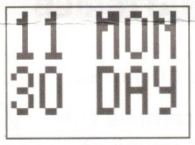

Once the Millennium comes, when you press the TIME key, you will see how much time has elapsed since the Millennium!

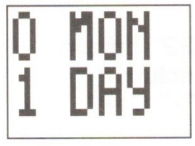

RESETTING THE TIME AND NAME

a. Press the TIME Button to go to COUNTING DOWN - IN TIME. You can now see how much time is left until the Millennium (or if it's after January 1, 2000, how much time since the Millennium).

b. If you press the TIME button again, you will go back to the Millennium graphic mode and see your Millennium Bug enjoying himself in downtime activities.

c. If you press the ENTER button instead, you will go to 'RESETING THE TIME AND NAME' mode and can reset your time and name.

COUNTING DOWN – IN TRIVIA!

While in "downtime" activities with your Millennium Bug friend, press the ENTER button. You will see a trivia fact. Use the RIGHT button to scroll through the entire fact! Use the LEFT button to scroll backwards through the fact.

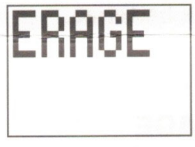

Depending on the current day, the trivia fact will tell how often (or how much!) an activity will take place before or since the Millennium.

Each day, when you press ENTER, you can see different questions!

The results are AUTOMATICALLY COMPUTED EACH DAY

by the Millennium Bug computer! So each day's totals are different as you move closer and closer to the Millennium! (and then after the Millennium, farther and farther away from the moment of the Millennium).

12:00AM, JANUARY 1, 2000!

At the moment the Millennium arrives, you will see a fireworks display on your screen. Don't miss it! It happens just once every thousand years!

BEYOND THE MILLENNIUM

Remember, even when the Millennium occurs, you can still keep playing trivia! Except now all trivia results are computed on time SINCE the Millennium!

INSERTING THE BATTERIES

To activate this game, pull the plastic tab from back of game.

To insert the battery, remove the battery compartment cover at the back of the game. (to remove cover, unscrew the cover, then push the cover in the direction of the arrow).

Insert one 3V "CR2032" button cell battery (battery included), making sure to align "+" and "–" as shown.

CAUTION: battery should be replaced by adult. not suitable for children under 36 months, may contain small parts.

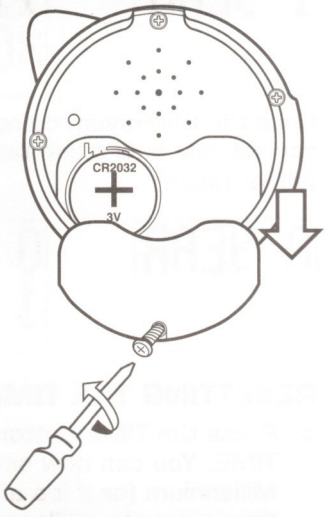

TO ENSURE PROPER FUNCTION:

- Battery installation should be done by adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removeable).
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Replace with new battery at the first sign of erratic operation.

Remember, your game will reset to preset mode once you've replaced or removed the batteries.

DEFECT OR DAMAGE

If a part of your game is damaged or something has been left out, DO NOT RETURN THE GAME TO THE STORE. The store doesn't have replacement part. Instead, write to us at:

TIGER ELECTRONICS LTD REPAIR CENTRE
980 Woodlands Parkway,
Vernon Hills, Illinois 60061, U.S.A.

In your note, mention the name of your game, your game's model number, and tell us briefly what the problem is. Also include sales slip, date, place of purchase and price paid. We will do our best to help.

90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. $6.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Ltd. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tigertoys.com.

®, TM, & © 1998 Tiger Electronics, Ltd. All rights reserved. 980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.

PRINTED IN CHINA 651520001IWTI-01